
Wireless power supply by

Remote Coupler system Wireless power supply & Signal transmission


Change both the IO-Link signal and Power supply to a wireless!!



Implementation of the wireless connector!

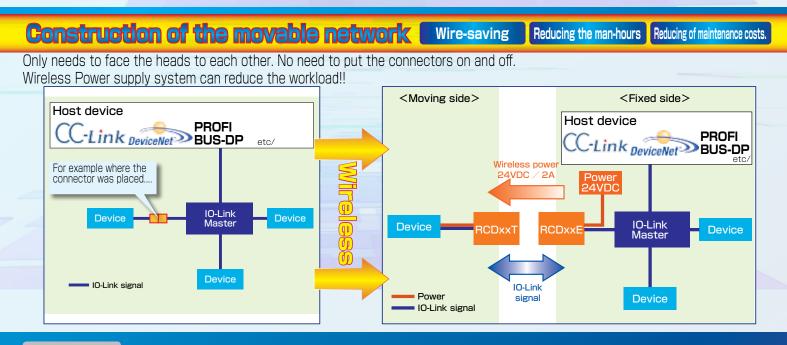

IO-Link

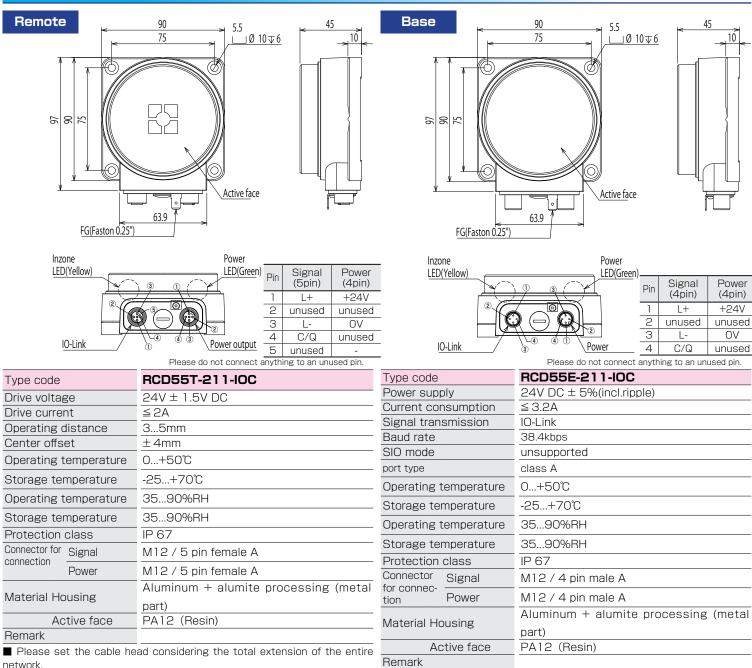


Please prepare your cable and connectors.

■ Please ground with a tab terminal(FG) and screw for case installation.

installation condition

In order to avoid influence of surrounding metal, or to avoid mutual influence between parallel-mounted sensors, keep the minimum free zone as described below.

 Surround Metal Parallel Setting



Type code	Α	В	С
RCD55T-211-IOC	- 50	45	300
RCD55E-211-IOC	7 50		
			nit mm

■ It is recommended to install RCD55 in metal in order to reduce the influence of self-heating.

■ When the resin (ABSor ABS+PTB) is used to the case or the transmission surface, please be sure to avoid organic solvent or liquid containing them to splash over.

■ Please avoid facing the base part with metal continuously to avoid metal overheating or damage of the components.

■ When the unit keeps to be using under out-of specification distance/center offset/overload status for long time, it may be damaged by overheating.

Wireless Power Supply by **B & PLUS K.K.**

Mail : b-plus-usa@b-plus-kk.com Web : http://www.b-plus-kk.com

* Infor may change the mention contents such as specifications without a notice. Thank you for understanding