

No connection work for detector sensors is needed.



As soon as a transmitter RXT faces with an output sensor RXE, RXT transmits a detection signal. The connection work for a detector sensor is not necessary in every jig or die exchange.

No wiring work for Remote sensors is needed.

Since a detector and a transmitter are wired by one cable, its free from miss-wiring and decrease man-hours.




The size of detector is M8, M12, M18 and M30 and the size of the transmitter is M12, M18 and M30.

The combination of every size is possible.



Detector/Transmitter cable connected type

Dimension

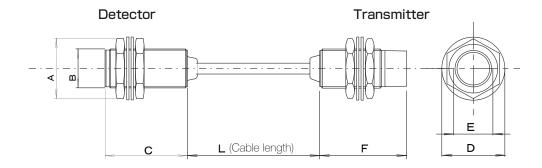

Detector

D0 (00 (0)							
Type code	Operating distance*1	Size	А	В	С		
RXD-0801-PU	1.5mm	M 8	φ 15	M8x1	30		
RXD-1202-PU	2mm	M 12	φ 20	M12x1	31		
RXD-1805-PU	5mm	M 18	φ 29	M18x1	30.5		
RXD-3010-PU	10mm	M 30	φ 41.5	M30x1.5	36		


*1 : Distance between a Detector and a target.


Transmitter

Type code	Operating distance*2	Size	D	Е	F
RXT-1202-PU	2mm	M 12	φ 20	M12x1	35.5
RXT-1805-PU	4mm	M 18	φ 29	M18x1	40
RXT-3010-PU	8mm	M 30	φ 41.5	M30x1.5	49

*2 : Distance between a Trancemitter and an Output sensor.

Ordering information

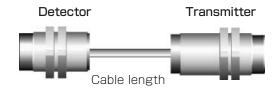

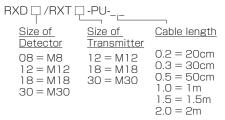

Ordering example

Detector: RXD-1202 + Transmitter: RXT-1805 + Cable length: 50 cm RXD12/RXT18-PU-0.5

B&PLUS K.K.

274 Gomyo Tokigawa-machi Hiki-gun Saitama 355-0343 Japan

^{*}Specification is subject to change without notice.