

Please hold the clear zone over the value mentioned below to avoid influence of surrounding metal and mutual interference. If it is different according to combination with variou data carrier, please keep the upper value.

ID reader							
Туре	Fig.		clear zone (mm)			Fig.	
mutual interference					_		
		Α	В	С		f	
BIS C-61R	1	40	40	40	3	60	

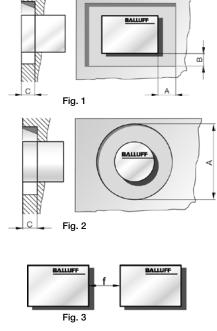

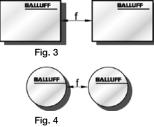

instllation note

■ Please refer to P56 for non-metal area of Data carrier and Read/write head.