

When installing the data carrier and the Read/write head in steel, to avoid the mutual interference please be sure to have the appropriate space for installation as shown below. Whenever there are different ranges by the combination of the Data carrier and the Read/write head, please take larger value for installation.

Data carrier

Type	Fig.	clear zone (mm)			Fig. mutual interference
		A	B	C	
BIS S-108-32/L	1	10	10	11	2 300
BIS S-150-32/A	1	80	80	22	2 300

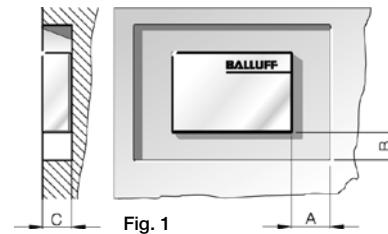


Fig. 1

Read/ write head

Type	Fig.	clear zone (mm)			Fig. mutual interference
		A	B	C	
BIS S-301	1	80	80	40	2 300
BIS S-302	1	40	40	40	2 300
BIS S-303	1	40	40	40	2 300

 


Fig. 2